



MY FIRST SMART PHONE

INSTRUCTION MANUAL



WARNING!

All packing materials such as internal bags, plastic collars, plastic films and carton inserts are not part of this product and should be discarded for your child's safety.

Important information

- Please retain this manual for further reference.
- Check phone regularly and discard if any part is damaged or broken.

©Spin Master Ltd. Tmpaw Patrol and all related titles, logos, characters; and SPIN MASTER logo are trademarks of Spin Master Ltd. Used under license. Nickelodeon and all related titles and logos are trademarks of Viacom International Inc.

www.PAWPATROL.com




The Paw Patrol Smart Phone encourages children to have fun while learning.

There are six activities to explore.

Before first use, remove the clear plastic battery isolator tab and dispose of safely with general household waste.

How to play

Press  to turn on and off

Press any number button once for the name of the character.

Press a second time for the character's phrase, a third time for the number, and a fourth time for the colour.

Hi from Ryder

Press to hear questions about colours

Volume down

Press to hear character related questions

Quiz Button

On / Off

Goodbye from Ryder

Press to hear questions about numbers

Volume up

Press to hear and find characters

How to change batteries

1. This product requires 2 x AAA batteries.
2. The batteries supplied with the product are for store demonstration purposes only and we recommend that they are replaced after purchase.
3. Use a suitable screwdriver to remove the battery cover located on the rear of the unit.
4. Remove the old batteries. Insert 2 x AAA batteries, ensuring the + and - terminals match the markings on the inside of the compartment.
5. Fit the battery compartment cover and tighten the screw to secure (but do not over-tighten).

Important battery information

Batteries must be inserted or removed by an adult.

Do not mix battery types (for example, alkaline and zinc carbon), or old and new batteries.

Do not attempt to recharge non-rechargeable batteries, as they may leak or explode.

Batteries must be inserted with the correct polarity.

Do not short circuit the supply terminals.

Remove exhausted batteries from the toy.

Remove rechargeable batteries from the toy before charging.

Rechargeable batteries must be charged by an adult.

Use only the recommended battery type or their equivalent.

Do not dispose of batteries in fire, as they may leak or explode.


Remove batteries from the toy if it is not being used for an extended period of time.



The purpose of the crossed-out wheellie bin symbol is to remind us that most electrical product and batteries contain trace elements which could be harmful to our environment and therefore our health. We must all be careful to dispose of them responsibly in a specifically designated way – either using a collection scheme or into the correctly labelled civic amenity (NOT into general waste) – this will help your local authority to arrange to recycle or dispose of them in the appropriate manner.

Automatic shut off

In order to save the batteries, the unit switches off after 45 seconds of inactivity. To re-activate, press the on/off button.

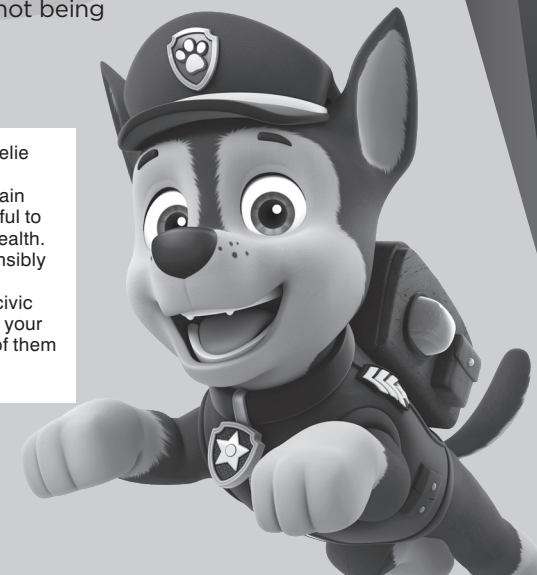

Trouble Shooting

If the phone does not turn on...	Check that the batteries are installed correctly, or install new batteries.
If the volume is too low...	Install new batteries
The sounds are abnormally quick or slow...	Install new batteries
If there is a continuous buzzing sound...	Install new batteries
If the light of the toy becomes dim...	Install new batteries

Important Information

Care instructions

- Keep the phone clean by wiping it with a slightly damp cloth
- Keep the phone out of direct sunlight and away from any direct heat source
- Do not expose the phone to moisture or water

This product complies with the essential requirements of the European Toy Safety Directive.



Trends UK Ltd., Greatworth Hall, Banbury, OX17 2DH. UK

Email: trends@jgdirect.net

Trends Toys Ireland, 8-9 Marino Mart, Dublin 3, D03 P590



 **Customer Services:**
+44 (0)1702 208175

Item Number: **PAW01**

For more fun learning toys go to **www.trendsuk.co.uk**