<u>nickelodeon</u>



WARNING!

All packing materials such as internal bags, plastic collars, plastic films and carton inserts are not part of this product and should be discarded for your child's safety.

Important information

- Please retain this manual for further reference.
- Check this toy regularly and discard if any part is damaged or broken.

©Spin Master Ltd. TMPAW PATROL and all related titles, logos, characters; and SPIN MASTER logo are trademarks of Spin Master Ltd. Used under license. Nickelodeon and all related titles and logos are trademarks of Viacom





Learn with Marshall. Gain experience of numbers, counting, colours and shapes.

Insert colourful coins into Marshall's fire truck for exciting interactive play!

Product features

1. TRY ME/OFF/ON/VOLUME CONTROL SWITCH

The product is supplied in **TRY ME** mode.

To turn the unit **ON**, slide the

ON/OFF/VOLUME CONTROL SWITCH to the **LOW VOLUME** or

HIGH VOLUME position.

To turn the unit OFF, slide the ON/OFF/VOLUME CONTROL SWITCH to the OFF position.



Try Me / Off / V- / V+

2. MODE SELECTOR SWITCH Slide the MODE SELECTOR SWITCH to either

the **NUMBERS MODE (N)** or to the **COLOURS MODE (C)** position.



- **3. COIN COMPARTMENT** The coins are collected here during the game and can be retrieved by opening the compartment door.
 - **4. AUTOMATIC SHUT-OFF** To preserve battery life, Marshall will automatically switch off after approximately 45 seconds without input. The unit can be switched on again by pressing any button.

How to Play

Remove the plastic isolator strip from the battery compartment and discard immediately with general household waste.

Slide the ON/OFF/VOLUME CONTROL SWITCH to LOW VOLUME or HIGH VOLUME.

For ease of play, leave the coin compartment door on the back open. Place the coins in front of you in order from 1 to 10. Marshall will ask you to insert a coin into the front of his truck.

Slide the selector button on the back to learn about Numbers and Counting, or Colours and Objects.

NUMBERS MODE

Insert the colourful coins into the slot in Marshall's truck to hear him count. The coins will fall in and can be retrieved through the door on the back.

Press the shield on the front of the truck.

Marshall will ask for a certain number of

coins to be inserted. Follow his instructions and insert the same number of coins to answer the question correctly.

Battery

compartment

compartment





Press the shield button once more to change the questions. Marshall will ask you to find a number. To answer the question correctly, insert the coin with the correct number into the slot.

Press the shield button a third time. Marshall will ask you to find objects. Insert

the appropriate coin into the slot to answer the question.

You will hear encouraging phrases and don't worry if you make a mistake, as Marshall will ask a new question.

COLOURS MODE

Press the shield button on the truck.

Marshall will ask you find a coin that has objects of a certain colour. Insert the appropriate coin into the slot to answer the question.

Press the shield button again to change the type of questions. Now Marshall will ask you find a coin of a particular colour. Find the coin and insert it into the slot.

You will hear encouraging phrases, and if you make a mistake Marshall will ask a new question.

How to change batteries

- 1. This product requires 3 x AAA (LRO3) 1.5V batteries.
- 2. The batteries supplied with the product are for store demonstration purposes only and we recommend that they are replaced after purchase.
- 3. Use a suitable screwdriver to remove the battery cover located on the rear of the product.
- 4. Remove the old batteries. Insert 3 x AAA batteries, ensuring the + and terminals match the markings on the inside of the compartment.
- 5. Fit the battery compartment cover and tighten the screw to secure (but do not over-tighten).



Important battery information

Batteries must be inserted or removed by an adult.

Do not mix battery types (for example, alkaline and zinc carbon), or old and new batteries.

Do not attempt to recharge non-rechargeable batteries, as they may leak or explode.

Batteries must be inserted with the correct polarity.

Do not short circuit the supply terminals.

Remove exhausted batteries from the toy.

Remove rechargeable batteries from the toy before charging.

Rechargeable batteries must be charged by an adult.

Use only the recommended battery type or their equivalent.

Do not dispose of batteries in fire, as they may leak or explode.

Remove batteries from the toy if it is not being used for an extended period of time.



The purpose of the crossed-out wheelie bin symbol is to remind us that most electrical product and batteries contain trace elements which could be harmful to our environment and therefore our health.

We must all be careful to dispose of them

responsibly in a specifically designated way – either using a collection scheme or into the correctly labelled civic amenity (NOT into general waste) – this will help your local authority to arrange to recycle or dispose of them in the appropriate manner.



Trouble Shooting

| If the toy does not turn on | Check that the batteries are installed correctly, or install new batteries. |
|---|---|
| If the volume is too low | Install new batteries |
| The sounds are abnormally quick or slow | Install new batteries |
| If there is a continuous buzzing sound | Install new batteries |
| If the light of the toy becomes dim | Install new batteries |

Important Information

Care instructions

- Keep the toy clean by wiping it with a slightly damp cloth
- Keep the toy out of direct sunlight and away from any direct heat source
- Do not expose the toy to moisture or water

This product complies with the essential requirements of the European Toy Safety Directive.



Trends UK Ltd., Greatworth Hall, Banbury, OX17 2DH. UK Email: trends@jgdirect.net
Trends Toys Ireland, 8-9 Marino Mart, Dublin 3, D03 P590



Customer Services: +44 (0)1702 208175

144 (0)1702 208175 Item Number: **PAW03**

For more fun learning toys go to www.trendsuk.co.uk