

The Adventures of Paddington™

Paw Pad (Interactive first tablet

3+

INSTRUCTION MANUAL



WARNING!

All packing materials such as internal bags, plastic collars, plastic films and carton inserts are not part of this product and should be discarded for your child's safety.

Important information

- This toy is suitable for children aged 36 months and over.
- Please retain this manual for further reference.
- Check tablet regularly and discard if any part is damaged or broken.



PADDINGTON™ and PADDINGTON BEAR™

© Paddington and Company Limited/Studiocanal S.A.S 2020

Paddington Bear™, Paddington™ and PB™ are trademarks of Paddington and Company Limited

Licensed on behalf of Studiocanal S.A.S by Copyrights Group

www.paddington.com

The Adventures of Paddington

The Paddington Paw Pad encourages children to have fun while learning.

3 activities to explore.

TRY ME/ON/OFF/VOLUME CONTROL SWITCH (on the back of Paw Pad)

To turn the unit ON, slide the TRY ME/ON/OFF/VOLUME CONTROL SWITCH to the LOW VOLUME (V-) or HIGH VOLUME (V+) position. To turn the unit OFF, slide the ON/OFF/VOLUME CONTROL SWITCH to the OFF position.

Before first use, remove the clear plastic battery isolator tab and dispose of safely with general household waste.



Try Me / Off / V- / V+

1 Letters & Pictures

Select this, then press the a, b or c button once for a description of the object, press again for the name of the first letter.

Press to hear all about Paddington

2 Objects

Select, then press any one of the six object buttons once for a description, press again for the pronunciation of the first letter.

3

Numbers & Shapes

Select, then press one of the four number/shape buttons once to hear the number, press again for the name of the shape.

AUTOMATIC SHUT OFF:

In order to save the batteries, the unit switches off after about a minute of inactivity. To re-activate the unit press any button.

How to change batteries

1. This product requires 3 x AAA (LR03) 1.5V batteries.
2. The batteries supplied with the product are for store demonstration purposes only and we recommend that they are replaced after purchase.
3. Use a suitable screwdriver to remove the battery cover located on the rear of the product.
4. Remove the old batteries. Insert 3 x AAA batteries, ensuring the + and - terminals match the markings on the inside of the compartment.
5. Fit the battery compartment cover and tighten the screw to secure (but do not over-tighten).

Important battery information

Batteries must be inserted or removed by an adult.

Do not mix battery types (for example, alkaline and zinc carbon), or old and new batteries.

Do not attempt to recharge non-rechargeable batteries, as they may leak or explode.

Batteries must be inserted with the correct polarity.

Do not short circuit the supply terminals.

Remove exhausted batteries from the toy.

Remove rechargeable batteries from the toy before charging.

Rechargeable batteries must be charged by an adult.

Use only the recommended battery type or their equivalent.

Do not dispose of batteries in fire, as they may leak or explode.

Remove batteries from the toy if it is not being used for an extended period of time.



The purpose of the crossed-out wheellie bin symbol is to remind us that most electrical product and batteries contain trace elements which could be harmful to our environment and therefore our health. We must all be careful to dispose of them responsibly in a specifically designated way – either using a collection scheme or into the correctly labelled civic amenity (NOT into general waste) – this will help your local authority to arrange to recycle or dispose of them in the appropriate manner.





Trouble Shooting

If the tablet does not turn on...	Check that the batteries are installed correctly, or install new batteries.
If the volume is too low...	Install new batteries
The sounds are abnormally quick or slow...	Install new batteries
If there is a continuous buzzing sound...	Install new batteries
If the light of the toy becomes dim...	Install new batteries

Important Information

Care instructions

- Keep the tablet clean by wiping it with a slightly damp cloth
- Keep the tablet out of direct sunlight and away from any direct heat source
- Do not expose the tablet to moisture or water

This product complies with the essential requirements of the European Toy Safety Directive.




Trends UK Ltd., Greatworth Hall, Banbury, OX17 2DH. UK

Email: trends@jgdirect.net

Trends Toys Ireland, 8-9 Marino Mart, Dublin 3, D03 P590



 **Customer Services:**
+44 (0)1702 208175

Item Number: **PB20**

For more fun learning toys go to www.trendsuk.co.uk

