




# Peppa's Sing & Learn Microphone Instruction Manual

Content:  
Microphone  
Manual

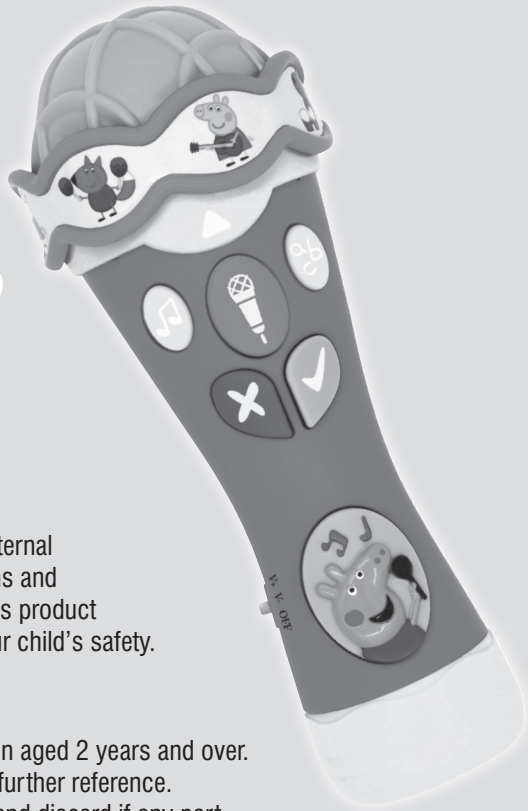

## WARNING!

All packing materials such as internal bags, plastic collars, plastic films and carton inserts are not part of this product and should be discarded for your child's safety.

## Important information


- This toy is suitable for children aged 2 years and over.
- Please retain this manual for further reference.
- Check microphone regularly and discard if any part is damaged or broken.



OfficialPeppaPig

[www.peppapig.com](http://www.peppapig.com)

Before first use, remove the try-me tag from the battery compartment and dispose of safely. Switch the button of the unit to Vol- or Volt+.

 **MICROPHONE:** Press and hold down the microphone button to amplify your voice. Use in MUSIC or SONG modes to sing along.

As you turn the rim, the microphone will play the instrument sounds corresponding to each character

**MUSIC MODE:**  
Press on the MUSIC key, and Peppa will ask if you want to sing a song. In order to select a song, turn the rim and stop a character in front of the arrow. Each character is linked to one of 7 songs: Bing bong, Birdy woof woof, Big balloon, Train song, The rainbow, and the wheels on the bus. Press Peppa while a song is being played, and it will stop the song and repeat it from the beginning. Press on the TRUE or FALSE key, and the unit will play funny sounds.

**QUIZ MODE:**  
In this game, Peppa helps you recognise colours, phonics, instruments and characters. When pressing the quiz key (on the side of the microphone), Peppa will ask you a question. To answer, the child should use the true or false keys or turn the rim. Press the quiz key to repeat the question.

**SONG MODE:**  
You have to press Peppa to start SONG mode. Peppa will ask you if you want to sing with her. Peppa will tell you to turn the rim to choose a song. In this mode, you can sing along with Peppa or listen to Peppa singing. Each character is linked to one of 7 songs: Bing bong, Birdy woof woof, Big balloon, Train song, The rainbow, and the wheels on the bus. Press Peppa while a song is being played, and it will stop the song and repeat it from the beginning. Press on the TRUE or FALSE key, and the unit will play funny sounds.

Press on TRUE or FALSE key (✓ or ✗), and the unit will play funny sounds.

**OFF/Vol-/Volt+**  
Move to Vol- for low sound level and to Volt+ for higher sound level.

## How to change batteries

1. This product requires 3 x AAA (LR03) 1.5V batteries.
2. The batteries supplied with the product are for store demonstration purposes only and we recommend that they are replaced after purchase.
3. Use a suitable screwdriver to remove the battery cover located on the rear of the unit.
4. Remove the old batteries. Insert 3 x AAA batteries, ensuring the + and - terminals match the markings on the inside of the compartment.
5. Fit the battery compartment cover and tighten the screw to secure (but do not over-tighten).

## Important battery information

Batteries must be inserted or removed by an adult.

Do not mix battery types (for example, alkaline and zinc carbon), or old and new batteries.

Do not attempt to recharge non-rechargeable batteries, as they may leak or explode.

Batteries must be inserted with the correct polarity.

Do not short circuit the supply terminals.

Remove exhausted batteries from the toy.

Remove rechargeable batteries from the toy before charging.

Rechargeable batteries must be charged by an adult.

Use only the recommended battery type or their equivalent.

Do not dispose of batteries in fire, as they may leak or explode.

Remove batteries from the toy if it is not being used for an extended period of time.



The purpose of the crossed-out wheeled bin symbol is to remind us that most electrical product and batteries contain trace elements which could be harmful to our environment and therefore our health. We must all be careful to dispose of them responsibly in a specifically designated way – either using a collection scheme or into the correctly labelled civic amenity (NOT into general waste) – this will help your local authority to arrange to recycle or dispose of them in the appropriate manner.



# Trouble Shooting

If the unit does not turn on...	Check that the batteries are installed correctly, or install new batteries.
If the volume is too low...	Install new batteries
The sounds are abnormally quick or slow...	Install new batteries
If there is a continuous buzzing sound...	Install new batteries
If the light of the toy becomes dim...	Install new batteries

## Important Information

### Care instructions

- Keep the unit clean by wiping it with a slightly damp cloth
- Keep the unit out of direct sunlight and away from any direct heat source
- Do not expose the unit to moisture or water

This product complies with the essential requirements of the European Toy Safety Directive.



Trends UK Ltd., Greatworth Hall, Banbury, OX17 2DH. UK

Email: [trends@jgdirect.net](mailto:trends@jgdirect.net)

Trends Toys Ireland, 8-9 Marino Mart, Dublin 3, D03 P590



 **Customer Services:**  
**+44 (0)1702 208175**

Item Number: **PP07**

For more fun learning toys go to [www.trendsuk.co.uk](http://www.trendsuk.co.uk)