

# Peppa Pig<sup>TM</sup>



## Peppa's Phonic Alphabet Instruction Manual



### WARNING!

All packing materials such as internal bags, plastic collars, plastic films, carton inserts are not part of this product and should be discarded for your child's safety. The batteries included in this toy are for instore demonstration purpose only.

### Important information

- This toy is suitable for children aged 3 years and over.
- Please retain this manual for further reference.
- Check unit regularly and discard if any part is damaged or broken.

### Contents:

- Peppa
- 8 Phonic cubes
- Manual



eOne



OfficialPeppaPig




[www.peppapig.com](http://www.peppapig.com)

# Learn with Peppa.

Learn about letters, spelling, colours and shapes with Peppa. Put the interactive cubes into Peppa's dress and listen as she recognises each letter!

 
## Product features

### 1. ON/OFF/VOLUME CONTROL SWITCH (on the back of Peppa)

The product is supplied in Try Me Mode. To turn the unit ON, slide the ON/OFF/VOLUME CONTROL SWITCH to the LOW VOLUME  or HIGH VOLUME  position. To turn the unit OFF, slide the ON/OFF/VOLUME CONTROL SWITCH to the OFF  position.

Battery compartment

On / off Volume Switch

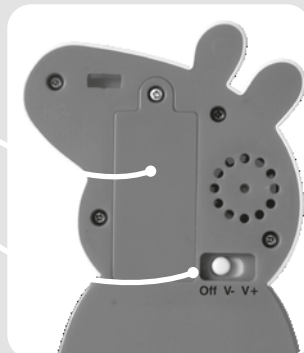


### 2. AUTOMATIC SHUT-OFF

To preserve battery life, Peppa will automatically power-down after approximately 45 seconds without input. The unit can be turned on again by pressing any button.

## How to Play

Adult assistance if recommended.

 Before you begin, lay out the cubes on the table in front of you. Each cube has four letters or numbers as shown in the image.

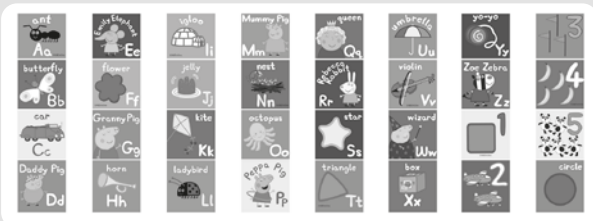

Tip - once Peppa has recognised the letter remove the cube while you wait for the next instruction.

## Activity modes



**abc** Press abc. Peppa will ask "Shall we learn our letter" and then ask you to find a letter, for example, "Can you find the b for butterfly."

Find the cube with the correct letter, and insert into the hole in her dress. The letter should face outwards. If you can't find the letter, don't worry. Peppa will ask you for another letter, or just insert any cube to hear the name and sound.



**spell** When you are confident that you know your letters, you can try the "spell" game.

Peppa will prompt you to spell one of the words listed to the right, for example, "Try to spell At."

Find the letters and insert them in the right order. Place the cube with the first letter into Peppa and she will confirm if it's correct. You will then get a reminder of which letter to place next.

- |        |       |       |       |       |
|--------|-------|-------|-------|-------|
| ● as   | ● is  | ● on  | ● at  | ● in  |
| ● it   | ● up  | ● hot | ● six | ● pat |
| ● big  | ● dog | ● box | ● hat | ● rat |
| ● nap  | ● got | ● mug | ● pig | ● tip |
| ● ten  | ● cup | ● hug | ● bus | ● fun |
| ● frog |       |       |       |       |

## Activity modes continued...



 
In quiz mode, Peppa will ask you to find a colour, object or number. Place the corresponding phonic cube into Peppa. Keep trying if you get it wrong!



Select the music function and sing along with Peppa to two different tunes!

## How to change batteries

- This product requires 2 x AAA 1.5v batteries.
- The batteries supplied with the product are for store demonstration purposes only and we recommend that they are replaced after purchase.
- Use a suitable screwdriver to remove the battery cover located on the rear of the unit.
- Remove the old batteries. Insert 2 x AAA batteries, ensuring the + and - terminals match the markings on the inside of the compartment.
- Fit the battery compartment cover and tighten the screw to secure (but do not over-tighten).

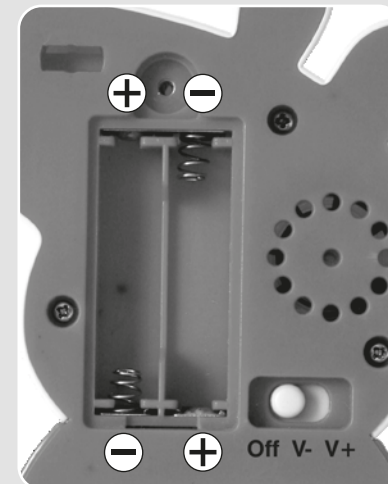


## Important battery information

Batteries must be inserted or removed by an adult. Do not mix battery types (for example, alkaline and zinc carbon), or old and new batteries. Do not attempt to recharge non-rechargeable batteries, as they may leak or explode. Batteries must be inserted with the correct polarity. Do not short circuit the supply terminals. Remove exhausted batteries from the toy. Remove rechargeable batteries from the toy before charging. Rechargeable batteries must be charged by an adult. Use only the recommended battery type or their equivalent. Do not dispose of batteries in fire, as they may leak or explode. Remove batteries from the toy if it is not being used for an extended period of time.



 The purpose of the crossed-out wheellie bin symbol is to remind us that most electrical product and batteries contain trace elements which could be harmful to our environment and therefore our health. We must all be careful to dispose of them responsibly in a specifically designated way - either using a collection scheme or into the correctly labelled civic amenity (NOT into general waste) - this will help your local authority to arrange to recycle or dispose of them in the appropriate manner.

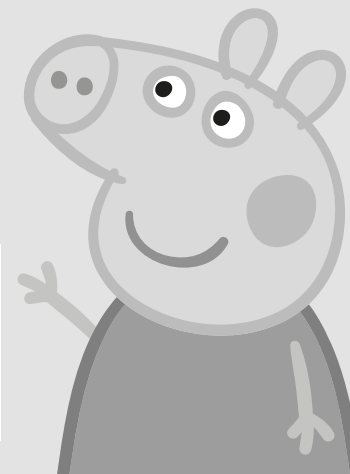

# Trouble Shooting

If for some reason the program/activity stops working or malfunctions, please follow these steps:

If the toy does not turn on...	Check that the batteries are installed correctly, or install new batteries.
If the volume is too low...	Install new batteries
The sounds are abnormally quick or slow...	Install new batteries
If there is a continuous buzzing sound...	Install new batteries
If the light of the toy becomes dim...	Install new batteries

1. Please turn the unit OFF
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

## Important Information

### Care and maintenance

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces.

This product complies with the essential requirements of the European Toy Safety Directive.




Trends UK Ltd., Greatworth Hall, Banbury, OX17 2DH. UK

Email: [trends@jgdirect.net](mailto:trends@jgdirect.net)

Trends Toys Ireland, 8-9 Marino Mart, Dublin 3, D03 P590



 **Customer Services:**  
**+44 (0)1702 208175**

Item Number: **PP12**

For more fun learning toys go to [www.trendsuk.co.uk](http://www.trendsuk.co.uk)

“Alphaphonics” and “Alpha Phonics” are Trade Marks of Trends UK Limited