Trouble Shooting

If the unit does not turn on	Check that the batteries are installed correctly, or install new batteries.
If the volume is too low	Install new batteries
The sounds are abnormally quick or slow	Install new batteries
If there is a continuous buzzing sound	Install new batteries

Important Information

Care instructions

- · Keep the tablet clean by wiping it with a slightly damp cloth
- · Keep the tablet out of direct sunlight and away from any direct heat source
- · Do not expose the tablet to moisture or water

This product complies with the essential requirements of the European Toy Safety Directive.



Trends UK LTD, Greatworth Hall, Banbury, OX17 2DH. UK Email: trends@jgdirect.net

Customer Services: +44 (0)1702 208175

Item Number: PP15

For more fun learning toys go to www.trendsuk.co.uk





Peppa's Interactive Playmat Instruction Manual

Content. Playmat

Manual



WARNING!

All packing material such as internal ba plastic collars, plas

and carton inserts are not part or uno p. and should be discarded for your child's safety.

Important information

- This toy is suitable for children aged 3 years and over.
- · Please retain this manual for further reference.
- Check playmat regularly and discard if any part is damaged or broken.







 
f Official Peppa Pig www.peppapig.com

Peppa Pig @ Astley Baker Davies Ltd/Entertainment One UK Ltd 2003.

Peppa's Interactive Playmat encourages children to have fun while learning. Includes four fun activities.

How to play

Switch the button of the sound unit to V- (ON, volume low) or V+ (ON, volume high).







123 numbers: Peppa will ask you to find one of the numbers 1-5. Press the puddle with the correct answer. Sing along:
the mat will automatically
start playing one of four songs,
and will continue to play
until it has played all four;
unless a new game is
selected.

Peppa says:
Peppa will ask you to
press a puddle. Each puddle
will play a short message
from the characters
on the mat.

Find?:
Peppa will ask you to find
a particular colour of
puddle or a particular
character:

How to change batteries

- 1. This product requires 3 x AA (LR6) 1.5V batteries.
- 2. The batteries supplied with the product are for store demonstration purposes only and we recommend that they are replaced after purchase.
- 3. Use a suitable screwdriver to remove the battery cover located on the rear of the unit.
- 4. Remove the old batteries. Insert 3 x AA batteries, ensuring the + and terminals match the markings on the inside of the compartment.
- 5. Fit the battery compartment cover and tighten the screw to secure (but do not over-tighten).

Important battery information

Batteries must be inserted or removed by an adult.

Do not mix battery types (for example, alkaline and zinc carbon), or old and new batteries.

Do not attempt to recharge non-rechargeable batteries, as they may leak or explode.

Batteries must be inserted with the correct polarity.

Do not short circuit the supply terminals.

Remove exhausted batteries from the toy.

Remove rechargeable batteries from the toy before charging.

Rechargeable batteries must be charged by an adult.

Use only the recommended battery type or their equivalent.

Do not dispose of batteries in fire, as they may leak or explode.

Remove batteries from the toy if it is not being used for an extended period of time.



The purpose of the crossed-out wheelie bin symbol is to remind us that most electrical product and batteries contain trace elements which could be harmful to our environment and therefore our health.

We must all be careful to dispose of them responsibly in a specifically designated way – either using a collection scheme or into the correctly labelled civic amenity (NOT into general waste) – this will help your local authority to arrange to recycle or dispose of them in the appropriate manner.