

## HOW TO SET YOUR POTATO CLOCK

### DATE & TIME

1. Press the SET button 4 times to display MONTH, then use the MODE button to set the current month.
2. Press the SET button once more to display DAY, then use the MODE button to set the current day.
3. Press the SET button one more time to display HOURS, then use the MODE button to set the current hour. Note that A/P or H appears at the right of the display: A = AM, P = PM, H = 24-hour clock. Select the desired format by pressing the MODE button repeatedly.
4. Press the SET button again to display MINUTES. Then use the MODE button to set the current minute value.
5. To save the settings you have entered, press SET and then MODE.

### ALARM & HOURLY SIGNAL

#### Setting the alarm:

1. Press the SET button once and then press the MODE button to activate the alarm function. Press SET one more time then use the MODE button to set the alarm hour.
2. Press SET again then use the MODE button to set the alarm minute.
3. Press SET again to save these settings.

### Switching off the alarm

To switch off the signal when the alarm sounds, press the SET button. You can also choose to switch off the alarm signal temporarily with the MODE button. If you use this so-called 'snooze' function, the alarm will sound every 5 minutes until you switch it off completely by pressing the SET button.

### Activating/deactivating alarm and hourly signals:

1. Press the SET button once, then press the MODE button to activate or deactivate the alarm and hourly signal functions: ALARM ON (🔔), CHIME ON (🔔), ALARM OFF and CHIME OFF.
2. Press three more times on the SET button to return to the current time.

### IF IT DOESN'T WORK

If your Potato Clock is not working, please check:

1. If the connections are correct.
2. If the wires are wrapped securely around the metal strips.
3. If the metal strips are inserted into the potatoes deeply enough for strong contact.
4. If the metal strips or wires are touching each other, which may cause a 'short circuit'.
5. If any of the metal strips are corroded. If so, use fine sandpaper (not included) to remove the rust.