



LEARN WITH THOMAS ALPHAPHONICS™

INSTRUCTION
MANUAL



WARNING! All packing materials such as internal bags, plastic collars, plastic films and carton inserts are not part of this product and should be discarded for your child's safety.



©2017 HIT Entertainment Limited.
HIT and the HIT logo are trademarks of
HIT Entertainment Limited.



©2017 Gullane (Thomas)
Limited.

Alphaphonics™ is a
trademark of Trends UK Ltd

Important information

- This toy is suitable for children aged 3 years and over
- Please retain this manual for future reference
- Check toys regularly and discard if any part is damaged or broken





Press at any time to hear the alphabet



Press at any time to hear fun music

Select one of seven activities and have fun with Thomas and Friends!



Activity 1: Press a letter button to hear the word and sound.



Activity 2: Press a letter button to hear its name and the phonetic sound.



Activity 3: Find a character or object. Don't worry if you can't find them the first time - you get 3 chances!



Activity 4: Find the first letter of a word. Don't worry if you can't find them the first time - you get 3 chances!



Activity 5: Can you find a phonetic letter from a spoken word? Don't worry if you can't find them the first time - you get 3 chances!



Activity 6: Copy a sequence of funny sounds. Will you be able to find them in the correct order? Take care - you have only one go!



Activity 7: Choose a button and have fun listening to all the fun sounds.



Repeat button. Press at any time if you need a question or sound repeated.

AUTOMATIC SHUT OFF: In order to save battery life, the unit will switch OFF if left idle for approximately two minutes. To re-activate the unit, select a game.

How to change batteries

1. This product requires 3 x AAA (LR03) 1.5V batteries.
2. The batteries supplied with the product are for store demonstration purposes only and we recommend that they are replaced after purchase.
3. Use a suitable screwdriver to remove the battery cover located on the rear of the product.
4. Remove the old batteries. Insert 3 x AAA batteries, ensuring the + and - terminals match the markings on the inside of the compartment.
5. Fit the battery compartment cover and tighten the screw to secure (but do not over-tighten).

Important battery information

Batteries must be inserted or removed by an adult.

Do not mix battery types (for example, alkaline and zinc carbon), or old and new batteries.

Do not attempt to recharge non-rechargeable batteries, as they may leak or explode.

Batteries must be inserted with the correct polarity.

Do not short circuit the supply terminals.

Remove exhausted batteries from the toy.

Remove rechargeable batteries from the toy before charging.

Rechargeable batteries must be charged by an adult.

Use only the recommended battery type or their equivalent.

Do not dispose of batteries in fire, as they may leak or explode.

Remove batteries from the toy if it is not being used for an extended period of time.



The purpose of the crossed-out wheellie bin symbol is to remind us that most electrical product and batteries contain trace elements which could be harmful to our environment and therefore our health. We must all be careful to dispose of them responsibly in a specifically designated way – either using a collection scheme or into the correctly labelled civic amenity (NOT into general waste) – this will help your local authority to arrange to recycle or dispose of them in the appropriate manner.



Trouble Shooting

If the product does not turn on...

Check that the batteries are installed correctly, or install new batteries.

If the volume is too low...

Install new batteries

The sounds are abnormally fast or slow... **Install new batteries**

If there is a continuous buzzing sound... **Install new batteries**

Important information

Care Instructions

- **Keep the Alphaphonics™ product clean by wiping it with a slightly damp cloth.**
- **Keep the Alphaphonics™ product out of direct sunlight and away from any direct heat source.**
- **Do not expose the product to moisture or water.**

This product complies with the essential requirements of the European Toy Safety Directive.



set Friendship in motion™

For fun facts, games and more visit www.thomasandfriends.com

For more fun learning toys go to www.trendsuk.co.uk



Trends UK Ltd., Greatworth Hall, Banbury, OX17 2DH. UK

Email: trends@jgdirect.net

Trends Toys Ireland, 8-9 Marino Mart, Dublin 3, D03 P590



Remove all packaging materials before giving this toy to a child. Details and colour of parts may vary.

Subject to availability.

Conforms to safety requirements.

Batteries: 3 x AA (included).

Made in China.



Customer Services:

+44 (0)1702 208175

Item Number: TT04

"Alphaphonics" and "Alpha Phonics" are Trade Marks of Trends UK Limited